

AP924(812) Pager Manual Programming Instructions

Step 1

Move out the Battery first , Press and Hold “ II “ button .

Step 2


Insert Battery, wait about 5 seconds until display is on and shows “ **Capcode xxxxx** “ on the first line , “ **1: on 1234567 AAAA** ” on the second line ,The “ **on** ” will be flashing.

Step 3

CAPCODE


*1. Displaying **1: on 1234567 AAAA** ; means 1st of set the capcode, use “ II “ button to change the figures and “ < > “ button to move positions, AP924 can carry up to 6 programmable capcodes.

*2. **1: on 1234567 AAAA** (if **off** is showed on display – the capcode is DISABLED.)


*3. Finish by pressing “  “ button will go to the next capcode or next feature setting .

BAUD

Can be changed baud rate between **512**, **1200** or **2400** by pressing “ II ” ,

Finish by pressing “  “ button

PASS

When **PASS** shows, it means program is done. Press “  “ button twice make sure the pager is on and ready to use

NOTE: The **AAAA** 4 position means different Function bit Features,
A = Alpha Numeric, **I** = IDEO, **N** = Standard Numeric, **P** = PRC
Numeric , - = Off, T= Tone Only.