

USER MANUAL

• **Alpha-Numeric Display Pager** •

MODEL : AL-A28e

Control Buttons	1
Features and Functions	2-3
Battery Door Cover	4
LCD Display	5
Function Operation.....	6-21
Reading a Message	6
Locking Message	7
Unlocking Message	8
Deleting Message	9
Deleting All Message	10
Move to Message Memo	11
Setting Alert	12
Pager On / Off	14
Setting Auto Sleep	15
Setting Alarm	16
Setting Time And Date	17
Setting Scroll	18
Setting Zoom In Or Zoom Out	20
Reading Mail Drop	21
Moving The Cursor	22
Reading Personal Message	23
Reading Full Message	24
Back-light / Duplicate	25
Error Message / Battery Gauge	26
Set Mail Drop Alert	27
Set Mail Drop History	28
Desk Charger (Option)	29

Control Buttons



Select Button

Function Button

Read Button

Read Button

- to read message
- to turn on back-light
- to turn on power



Select Button

- to move the cursor
- to preview message by cycles

Function Button

 
- to display the function menu
- to enable the function mode

Features and Functions

- ◆ Water-Proof , Dust-Proof
- ◆ Desk charger with extortion Buzzer (option)
- ◆ 4-Line , 84 English Alpha Character Memory
- ◆ Easy-To-Read Back-Lit Display
- ◆ Up To Memory Capacity 259,056 Characters.
- ◆ 16 Memory Slots + Message Full 10 sets
- ◆ Personal Message Memory : 20 sets , Mail Drop Available
- ◆ Show Time Of Day And Date
- ◆ User Selectable 12 / 24 Hour Clock
- ◆ Message Date And Time Stamping
- ◆ Incomplete Message-In Indication
- ◆ Duplicate Message Indicator
- ◆ Locks Important Message (Up To 10 Sets)
- ◆ All Or Individual Message Delete
- ◆ Unread Message Indicator , Reminder Alert


- ◇ **Low Battery Alert , Low Battery Indicator**
- ◇ **Zoom The Display - To Enlarge Message For Easy Read Ability**
- ◇ **Message Full Indication , Message Full Auto Storage**
- ◇ **Message Preview For A Quick Look At Each Message**
- ◇ **Message Move to Memo (User selectable)**
- ◇ **Service Area Indication**
- ◇ **5 Built-In Alarm Clocks**
- ◇ **4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode**
- ◇ **Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times**
- ◇ **Mail Drop Alerts**
- ◇ **Save Message When Off And When Changing Battery**
- ◇ **Selectable Auto Scroll Speed; Fast, Middle, Slow, or Off**

Battery Door Cover

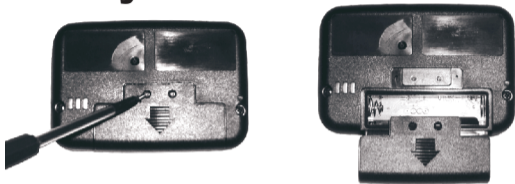

- ◇ The battery door cover is screwed to the rear cover tightly for water/dust-proof.
- ◇ Please refer to the picture to open and remove the battery door cover to insert or take out the rechargeable battery.
- ◇ Please be aware that a rechargeable battery is a must when the charger is used to recharge the battery.
- ◇ Please don't use the alkaline battery with A28 charger to avoid dangerous accidents.

 LCD Display



Pager Status Symbols

- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

Message Status Symbols

 
 
- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE

Function Menu Symbols


- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN / ZOOM OUT
- MESSAGE LOCK
- MESSAGE DELETE
- DELETE ALL
- MOVE TO MEMO
- MAIL DROP ALERT
- SET HISTORY



Locking Messages

- * Press ◀ or ▶ , to move the cursor to the desired flashing symbol □ .
- * Press ■ then press ◀ or ▶ to select the desired message to lock.
- * Press ■ to lock the message.
- * The symbol "■" is displayed , indicating the status of the message in memory.



Unlocking Messages

- * Press ◀ or ▶ , to move the cursor to the lock message  to unlock.
- * Press **||** , then , press ◀ or ▶ , to " MESSAGE UNLOCK " Mode.
- * Press **||** , to unlock the message.

  

Deleting Messages

- * Press ◀ or ▶ to move the cursor to select the message you desire. Press Ⓞ to read the message.
- * Press Ⓜ then press ◀ or ▶, to display "MESSAGE DELETE" Mode.
- * When "MESSAGE DELETE" is displayed on the screen, press Ⓜ to show "MESSAGE DELETE ?" on the screen, if you want to delete then press Ⓜ to delete the message. If you do not want, press Ⓞ to quit.

Ⓞ 05:Pls Call818-123456
 ▲ 7,Divid.
 [1]12:30 PM 4/12

Ⓞ 05:Pls Call818-123456
 ▲ 7,Divid.
 MESSAGE DELETE
 ↑ Ⓜ Ⓞ 天

 
Ⓞ 05:Pls Call818-123456
 ▲ 7,Divid.
 MESSAGE DELETE ?

Ⓞ ▲▲▲▲ Ⓜ▲Ⓜ▲▲▲▲▲▲▲Ⓜ 天
 ▲ ▼▼▼▼▼▼▼▼▼▼ Ⓞ
 12:35 PM 4/15/98





Deleting All Messages





(All unlocked and the read messages)

- * Press **||** then press **<** or **>**, to " DELETE ALL " Mode .
- * Press **||** to show " DELETE ALL ? " on the screen. If you want to delete all messages then press **||** ,all unlocked and the read messages are deleted. If you do not want then press **Ⓛ** to quit.




Setting Alert

- * Press **||** , then , press **◀** or **▶** once to display " SET ALERT " Mode .
- * Press **||** , to enable "SET ALERT".
- * Press **▲** or **▼** , to move the cursor to the desired alarm mode .(Alert  / Musical  / Vibration  / Sleep  are optional)
- * Press **◀** or **▶** , to move to the cursor to the desired tone or music .

    


 
- * Press **11** setting the alert is completed. Press **1** to quit.



- * The **◁** or **⌘** symbol is displayed if the message receiver is in the audible or musical mode .




  - * The **◁** or **⌘** symbol won't display on screen if the receiver is in the silent mode or sleep mode.








Turning Your Pager Off

- * Press **||** , then , press **◀** or **▶** , to " PAGER OFF " mode.
- * Press **||** , till " PAGER OFF ? " appears on the screen.
- * Press **||** , to turn the pager off .
- * After turning your pager off , the screen will be empty.
- * Press **⏻** , to turn the pager power on.

 




Setting Auto Sleep

     - * Press **II** , then, press **◀** or **▶** to display " Auto Sleep " mode.
- * Press **II** , to enable " Auto Sleep Set " Mode.
- * Press **▲** or **▼** to select "open" or "close" (symbol **☺** or **-**) and adjust the digits, press **◀** or **▶** for moving the cursor.
- * Press **II** setting auto sleep mode is completed. The screen returns to stand-by status.
- * **☺** is displayed when the Auto Sleep mode is set.
- * The enable **zZ** symbol indicates your pager is during setting status.






Setting Alarm (5 alarms)

   - * Press **II** , then , press **<** or **>** to "SET ALARM "Mode.
- * Press **II** , to enable.
- * Press **<** or **>** , to move the cursor.
- * Press **▲** or **▼** , to set the alarm status either alarm enabled , alarm disabled or set time.
- * Press **II** setting the alarm is completed. Press **⏻** to quit.





Setting Time And Date


- * Press **||** , then , press **◀** or **▶** once until "SET TIME " Mode is displayed.
- * Press **||** , to enable set time.
- * Press **◀** or **▶** , to move the cursor to the hour / minute digit .Then press **▲** or **▼** adjust each set of digits : AM/ PM/24 hr / month / day.
- * Press **||** to activate the time and date change. Press **⏻** to quit.

   


Setting Scroll

  

- * Press **||** , then , press **◀** or **▶** , to " SET SCROLL " Mode .
- * Press **||** , to enable scroll automatically.
- * Press **▶** to set speed high, press **◀** to set speed low or off the auto scroll function.
 - (1) **■** -- Slow.
 - (2) **■ ■** -- Middle.
 - (3) **■ ■ ■** -- Fast.
 - (4) **X** ----- Off.





 


     - * When the Auto scroll is set, the  symbol is displayed on screen.




 
 
 
Setting Zoom In / Zoom Out

- * Press **||** ,then press **◀** or **▶** , to "ZOOM IN".(symbol ), Then, press **||** to confirm..
- * The letters on screen enlarge and become two lines to read.
- * Or press **◀** or **▶** to move the cursor again to " ZOOM OUT " (symble ), and press **||** to complete.
- * The letters on screen change to four lines to read.



 
 
 
Moving the Cursor

- * Press ◀ or ▶ to move cursor to the  icon flashes, indicating the present position of the message you are going to read.
- * Press ▼ to move cursor to the second row; "MAIL DROP AREA".
- * Press ▲ to move the flashing icon to the top row; "MESSAGE AREA".






Reading Personal Message

- * Press ◀ or ▶, to move the flashing icon to the ✉ symbol .
- * Press ⏻, to read message.
- * When the ✉ symbol is shown in the top left-hand corner of the display, this indicates the message status as a personal message .




Reading Full Message

   - * Press ◀ or ▶ , to move the flashing icon to the 𐀀 symbol.
- * Press ⏻ , to read message.
- * When the 𐀀 symbol is shown in the top left-hand corner of the display ,it indicates the message status as a full message.




 
Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .


Duplicate Message

 
When the pager receives a duplicate message, only the latest message will be displayed on the LCD screen.

The  symbol shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".






 
 
Error Message

If the error message is received. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.





Battery Gauge

The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from  (full),  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery to make sure the pager is in receivable condition.





Set Mail Drop Alert

- * Press **▼** to move the cursor to the "MAIL DROP AREA"..
- * Press **||** , to display the function menu .
- * Press **◀** or **▶** , to move the cursor to set mail drop alert, "CHIRP ON". If you already turned on the alert, the screen will show "CHIRP OFF".
- * Press **||** , to activate the function .Or press **Ⓛ** , to exit the function .
- *

  

Set Mail Drop History

- * The user could select how many sets they want under "Mail Drop" cursor.
- * Move the cursor to "MAIL DROP AREA".
- * Press **||** then press **▶** to the "SET HISTORY"
- * Press **||** to into select "Sets".
- * Press **◀** or **▶** to move the "▲". When you move the "▲" to under "5", it means you select 5 sets under this cursor. Move to "8", means 8 sets.
- * Press **||** to confirm your setting.

  

Desk Charger (Option)



- ◇ Please don't use the alkaline battery with A28 charger to avoid dangerous accidents.
- ◇ The A28 charger has built with a buzzer, when the A28 is in the charger and paged, the beeping sound comes out from the buzzer built-in the charger.



762-00031-0