

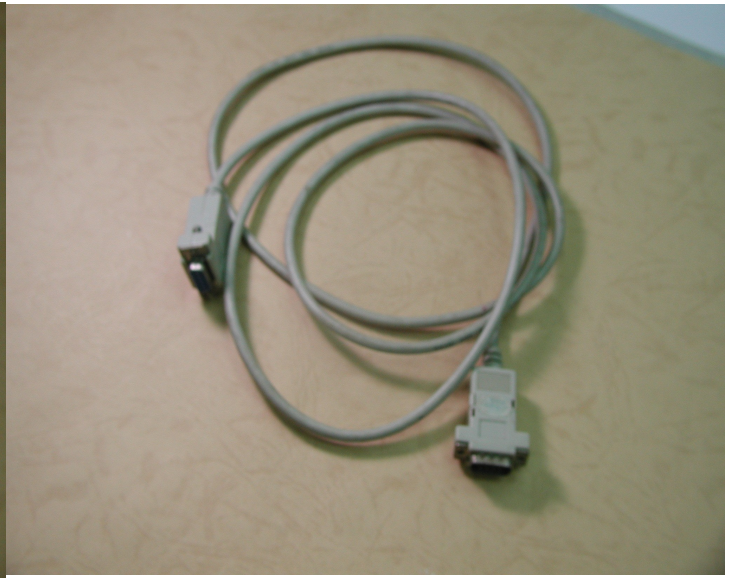


TX-125 firmware update instruction


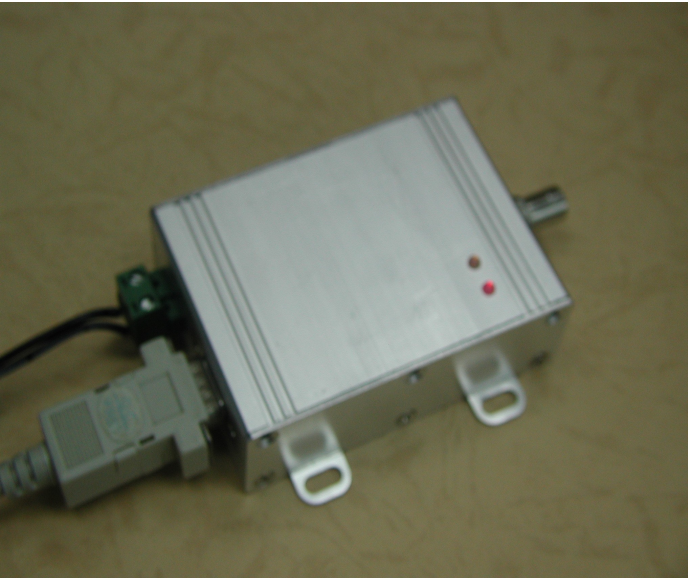


Firmware version & file name: tx125en_v234r.a34


- 1). Connect 9-pin RS232 cable between TX-125 & PC
- 2). Run the “Firmware Update Programming software” first
- 3). Click “LINK” ,
- 4). Power on Device of TX-125 now

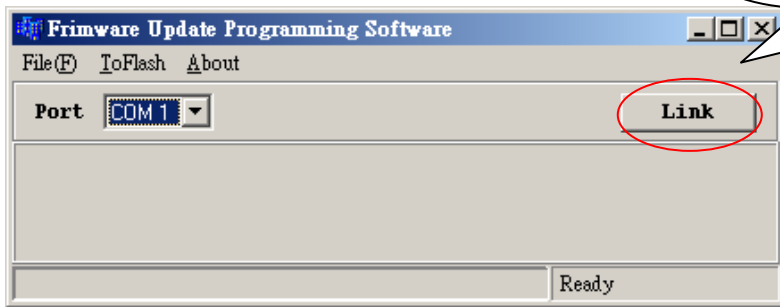


Connection success

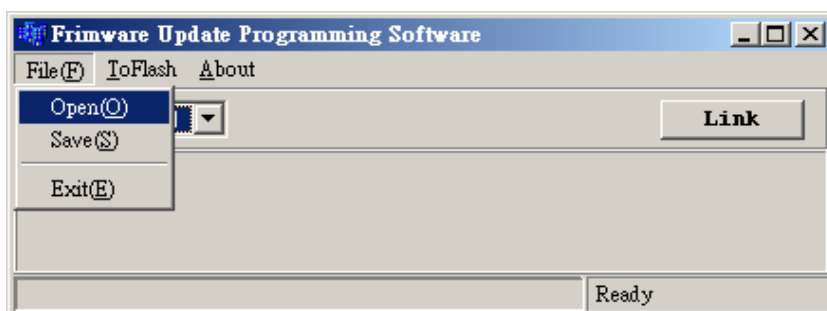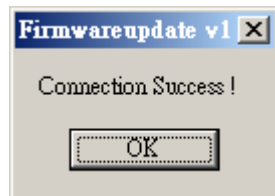

Open file :
tx125en_v234r.a34

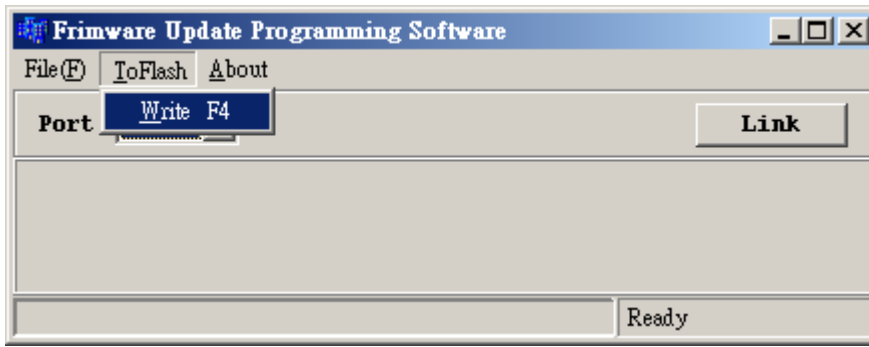

Use "Write" button to Update Firmware

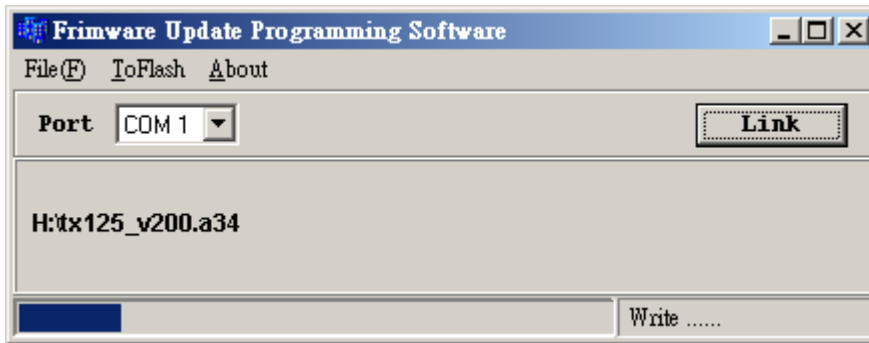

Programming

