

## TP-161 Hand Programming:

1. Pressing "Pause" button, connect power adapter until "PASS WORD" appeals on LCD display (see Figure 1).
2. Press "Power" button once to change Frequency.
  - 2.1. Press "UP or DOWN" buttons to change Frequency.
  - 2.2. Press "RIGHT" button to go to next digit.
  - 2.3. Press "POWER" button to save Frequency settings, at the same time "CAPCODE" will appear.
3. To change CAPCODE:
  - 3.1. Press "UP or DOWN" buttons to turn capcode "ON or OFF".
  - 3.2. Press "RIGHT" button to go to next digit.
    - 3.1.1. Press "UP or DOWN" buttons to change capcode.
    - 3.1.2. Press "RIGHT" button to go to next digit.
    - 3.1.3. Press "POWER" button to save capcode settings, and at the same time to going to next capcode settings (total of 8 capcodes), until "BAUD" rate setting appears.
4. To change "BAUD" rate, press "UP or DOWN" buttons (512, 1200, 2400), to save, press "POWER" button and at the same time "ADJUST CONTRAST" appears.
5. Press "POWER" button to save contrast setting, and at the same time "MODIFY PASSWORD" appears.
6. Press "POWER" button to save new password setting.
7. Press "POWER" button to save all settings.

Figure 1:

