 




- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Turn a device off before removing or installing a battery or accessory.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.

**Overview & Basic Operation**

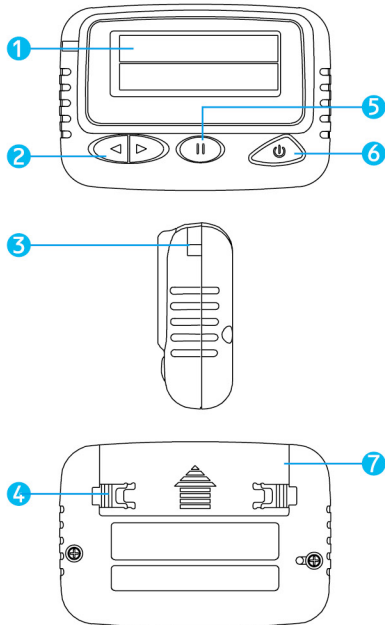

- 1 LCD**
- 2 Navigation Button** • Preview message
- 3 Pager chain**
- 4 Battery door lock**
- 5 Function Button**
  - Show function menu
  - Select or save function setting
- 6 Read Button**
  - Power on button
  - Read message
  - Turn on backlit (hold button for a second)
- 7 Battery door**

**Icon**

**Pager Status Symbols**

- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

**Message Status Symbols**

 
- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE

**Function Menu Symbols**

- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN / ZOOM OUT
- MESSAGE LOCK
- MESSAGE UNLOCK
- MESSAGE DELETE
- DELETE ALL
- MOVE TO MEMO
- MAIL DROP ALERT


**Operation**

**Battery Gauge**



The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from (full), (1/2), (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

**Turning Your Pager Off**

 

1. Press , then , press or , to " PAGER OFF " mode. Press , till " PAGER OFF ? " appears on the screen. Press , to turn the pager off . After turning your pager off , the screen is empty.
2. Press , to turn the pager power on.

## Read Message



1. A flashing ▲ symbol indicates you have a message has not been read.(The symbol ▣ of mail drop shows on screen by flashing).
2. Press ◀ or ▶, to preview the message.
3. Press ⏺, to display your message.,Press ⏺ again, to view

 
If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically

## Locking Message



1. Press ◀ or ▶, to move the cursor to the desired flashing symbol ▣.
2. Press ⏺, press ◀ or ▶ to select the desired message to lock. Press ⏺, to lock the message.
3. The symbol 🔒 is displayed , indicating the status of the message in memory.

## Delete Message




1. Press ◀ or ▶, to move the cursor to select the message you desire. Press ⏺ to read the message.
2. Press ⏺, press ◀ or ▶, to display " MESSAGE DELETE " Mode.
3. When " MESSAGE DELETE ? " is displayed on the screen , press ▶ to delete the message.

## Delete All Message



 
1. Press ⏺, press ◀ or ▶, to " DELETE ALL " Mode .
2. When " DELETE ALL ? " is displayed , Press ▶, all unlocked and read messages are deleted.

## Move Message To Memo




1. Press ◀ or ▶, to move the cursor to the desired storing message. Press ⏺ to read the message.
2. Press ⏺, and press ▶ once, to move to " MOVE TO MEMO "
3. Press ⏺, to move the flashing icon message automatically into your memo mail .

## Reading Full Message

 


1. Press ◀ or ▶, to move the flashing icon to the ▣ symbol. Press ⏺, to read message.
2. When the ▣ symbol is shown in the top left-hand corner of the display , indicates the message status as a full message.

## Set Alert

 

1. Press ⏺, then , press ◀ or ▶ once to display " SET ALERT " Mode .
2. Press ⏺, to enable "SET ALERT".
3. Press ⏺, to move the cursor to the desired alarm mode .( Alert ▣ / Musical 🎵 / Vibration 📳 / Sleep 🌙 are optional )
4. Press ◀ or ▶, to move to the cursor to the desired tone or music .
5. Press ⏺ setting the alert is completed.

## Set Scroll

 


1. Press ⏺, then , press ◀ or ▶, to " SET SCROLL " Mode .
  2. Press ⏺, to enable scroll automatically.
  3. Press ⏺, to select the scroll speed.
- (1) ■■■ -- slow, (2) ■■■■ -- normal, (3) ■■■■■ -- rapid, (4) X-- off
4. Press ▶ to activate the function.
  5. When the Auto scroll is set, the 📄 symbol is displayed on screen.

## Zoom In / Out



 
1. Press ⏺, then press ◀ or ▶, to "ZOOM IN".(symble 🔍), Then, press ⏺ to confirm..
2. The letters on screen enlarge and become two lines to read.
3. Or press ◀ or ▶ to move the cursor again to " ZOOM OUT " (symble 🔍), and press ⏺ to complete.
4. The letters on screen change to four lines to read.

## Set Mail Drop Alert



1. To move the cursor to the Mail Drop.
2. Press ⏺, to display the function menu.
3. Press ▶, to move the cursor to set mail drop alert ( 📄 ).
4. Press ⏺, to activate the function .Or press ⏺, to exit the function .

## Error Message

 

If it is received the error message. The 🚫 symbol is shown in the top left-hand corner of the display , indicates the message status as a Error message.