




- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Turn a device off before removing or installing a battery or accessory.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.

Quick look at watch pager

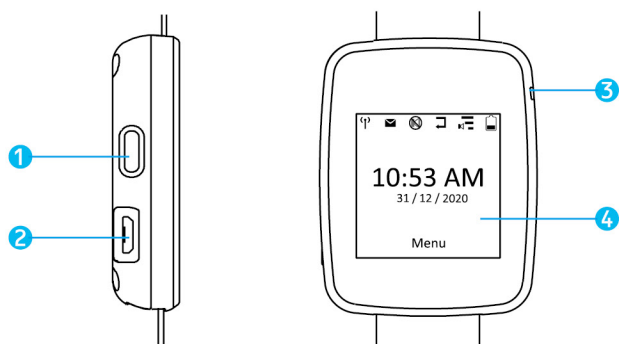

1 Side button

- Single press to return to last page.
- Press and hold to return to menu.

2 Micro USB



- Charge the watch pager.
- Program the watch pager.

3 LED indicator

- Constantly light up: The watch pager is charging.
- Blinking: New messages are received.

4 Touch screen

The interface

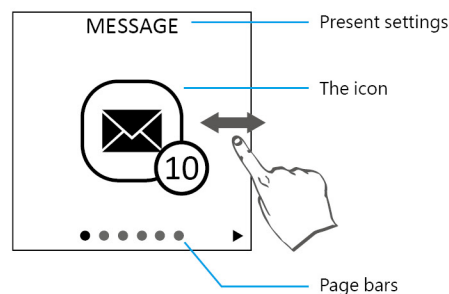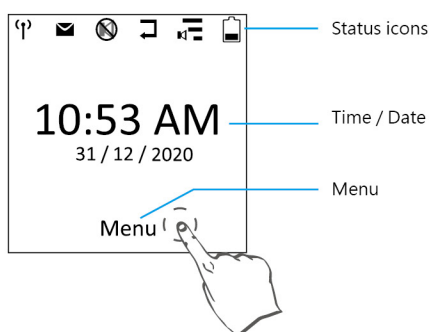

Main Menu

- Tap the "MENU" on the display to enter the settings.

Settings

- Swipe left or right to the setting glance.
- Swipe up or press the side button to return to the MENU.

The functions

Status icons

	OUT OF RANGE INDICATOR
	UNREAD MESSAGE
	BEEP ALERT
	BEEP & VIBRATE
	VIBRATE
	SILENT
	AUTO SCROLL INDICATOR
	ALARM
	REMAINING BATTERY LIFE
	VOLUME

Main function icons

	MESSAGE
	SETTING
	TECHNICAL
	ALARM
	PAGER OFF
	DELLTE ALL MESSAGE



Message icons

	UNREAD MESSAGE
	DUPLICATE UNREAD MESSAGE
	READ MESSAGE
	DUPLICATE READ MESSAGE


Basic operations


Read messages




1. Tap the "MENU" to enter the sub-menu and settings.
2. Choose "MESSAGE"  7 to read messages.
3. Swipe left or right to read messages (the maximum messages is 10).
4. Tap the previewed texts to read entire message.
5. Scroll up or down to browse the message.
6. Tap "BACK" or press the side button to return previewed texts.
7. When "AUTO SCROLL" is enabled, the message would scroll down automatically.
8. Status icons  " give you information that you have unread messages.


Delete messages

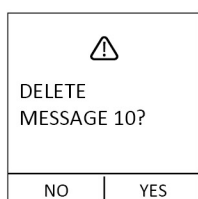


1. Tap the "MENU" to enter sub-menu and settings.
2. Choose "MESSAGE"  7.
3. Tap the previewed texts to enter the entire message.
4. Tap "DELETE" .
5. Tap "YES" to confirm message-deleting .
6. To return to "MENU" , tap "NO" or press side button.


Delete all messages

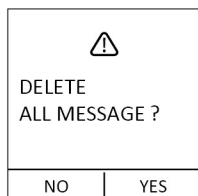



1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe left or right to "DELETE ALL"  , then tap again to confirm.
3. Tap "YES" to confirm all message-deleting .
4. To return to "MENU" , tap "NO" or press side button .

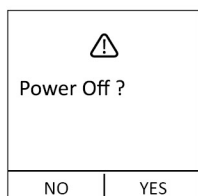



Turn off




1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "PAGER OFF" to turn off watch (status icon: ).
3. Tap "YES" to confirm turn-off.
4. To return to "MENU" , tap "NO" or press side button .
5. Press and hold the side button to turn on the watch pager.

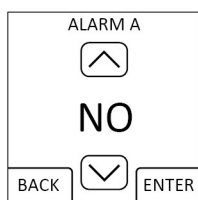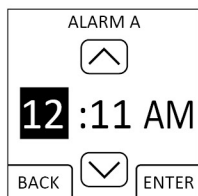
Set alarms



1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "ALARM" (status icon: ) to settings, then tap the alarm A or B in the list to change its settings.
3. Swipe to change hours / minutes / AM or PM.
4. Tap and scroll up or down to change the number, then tap "ENTER" to save your changes.
5. Tap up or down arrows to choose "ON" or "OFF" the alarms, then tap "ENTER" to save your changes.
6. To return to previous step, press "BACK" or press the side button.
7. When alarm is on, the status icons are ALARM A  / ALARM B  / ALARM AB  .


Set up the date

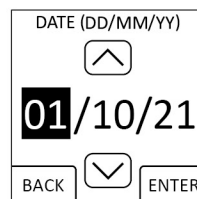


1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the DATE.
3. Swipe left or right to change date / month / year.
4. Tap up or down arrows to change the numbers.
5. Tap "ENTER" to save your changes
6. To return to previous step, press "BACK" or press the side button.


Set up the time




1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the TIME.
3. Swipe left or right to change hours / minutes / AM or PM.
4. Tap up or down arrows to change the numbers.
5. Tap "ENTER" to save your changes.
6. To return to previous step, press "BACK" or press the side button.

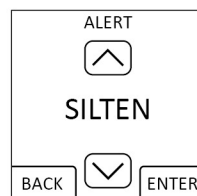

Set alerts




1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the ALERT .
3. Tap up or down arrows to change the notification alert: (BEEP / BEEP & VIBRATE / VIBRATE / SILENT).
4. Tap "ENTER" to save your changes.
5. To return to previous step, press "BACK" or press the side button.

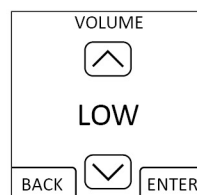
Adjust sounds




1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the VOLUME.
3. Tap the up or down arrows to adjust volume .
4. Tap "ENTER" to save your changes.
5. To return to previous step, press "BACK" or press the side button.
6. Status icon  " would give you information of the volume.



Adjust backlight

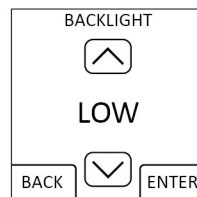

1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the BACKLIGHT.
3. Tap the up or down arrows to adjust backlight.
4. Tap "ENTER" to save your changes.
5. To return to previous step, press "BACK" or press the side button.

Set auto scroll

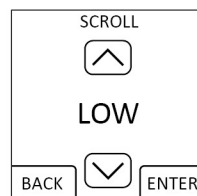

1. Tap the "MENU" to enter sub-menu and settings.
2. Swipe to "SETTING" (status icon: ), then tap the SCROLL.
3. Tap the up or down arrows to adjust the speed of scroll: (FAST 3 seconds / MEDIAN 6 seconds / SLOW 9 seconds).
4. Tap "ENTER" to save your changes
5. To return to previous step, press "BACK" or press the side button.
6. Status icon  " would give you information of the auto scroll which is enable .