



Gold Apollo Co., Ltd.

## Alpha-Numeric Display Pager

MODEL : AL-A26



# PAGER PROGRAMMING GUIDE

# Contents

<b>GETTING STARTED .....</b>	<b>1</b>
EQUIPMENT REQUIRED .....	1
EQUIPMENT SETUP .....	1
<b>INSTALLING PROGRAMMER SOFTWARE.....</b>	<b>3</b>
INSTALLATION .....	3
RUNNING .....	6
<b>ALA26 PROGRAMMING .....</b>	<b>7</b>
INTRODUCTION.....	7
STARTING THE PROGRAMMER .....	7
CODE AND FEATURES MENU .....	8
<i>Frequency</i> .....	9
<i>Capcode (Decimal Address)</i> .....	9
<i>Message Type Status</i> .....	12
<i>Auto Increase 1 after write</i> .....	14
ALERT AND STATUS .....	14
<i>Alerts and Status</i> .....	15
<i>Manu Of Pager</i> .....	17
<i>Manual Write</i> .....	18
<i>Prompts</i> .....	19
PROMPTS EDIT .....	19
SOURCE PROMPTS .....	20
FILE   OPEN (CTRL + O) .....	21
FILE   SAVE (CTRL + S) .....	21
FILE   EXIT (CTRL + E).....	22
PAGER   READ (F3) .....	22
PAGER   WRITE (F4) .....	23
ABOUT .....	24

## Getting Started

The ALA26 pager Programming software, provides the flexibility to program ALA26 pagers to meet individual requirements. To obtain the best results from the product, please take a few minutes to read this instruction guide.

## Equipment Required


To install and operate the programmer, you need a system that meets the following minimum requirements:

- An personal computer (PC) with printer port, or compatible
- Windows 98 SE or above operating system (XP Recommended)
- 256 MB of RAM
- ALA26 Programmer
- A DB25 male-male printer cable
- ALA26 Pager Programming Software

## Equipment Setup

Refer to Figure 1 while performing the follows:

1. At the rear of the PC, connect the DB25 male-male interface cable to the printer port on your computer.
2. Plug end of the DB25 cable into the ALA26 programmer.
3. Hardware installation is complete.

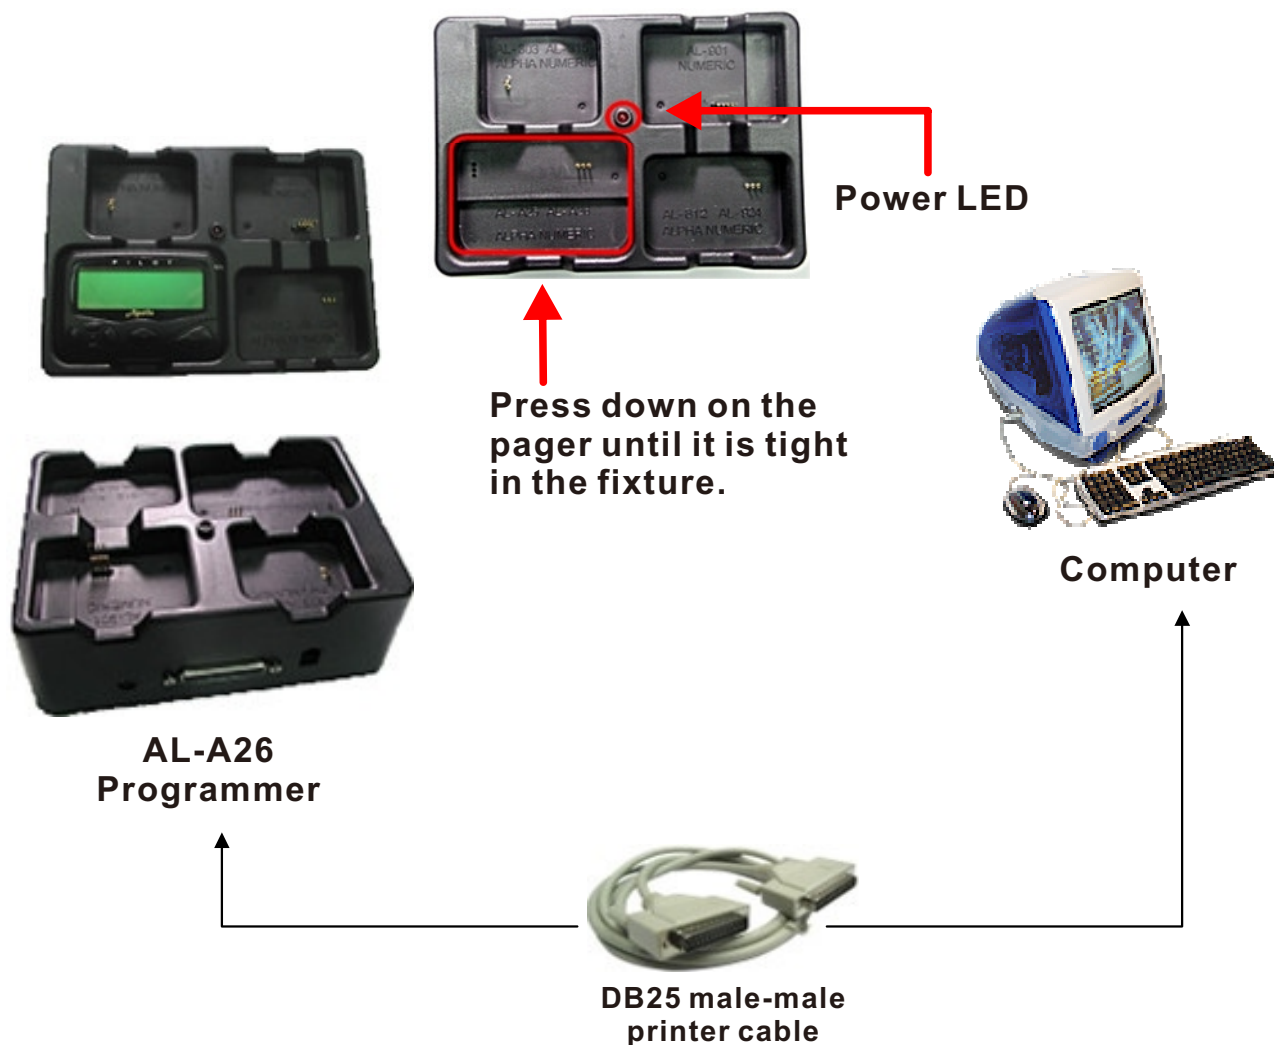


*Figure 1 Programmer Hardware Connections*

# Installing Programmer Software

## Installation

Install the programmer software into a PC as follows:


1. Uncompress the ALA26V373.zip and save them in a temporary directory.
2. Double click the setup.exe file. Click on “Y”.

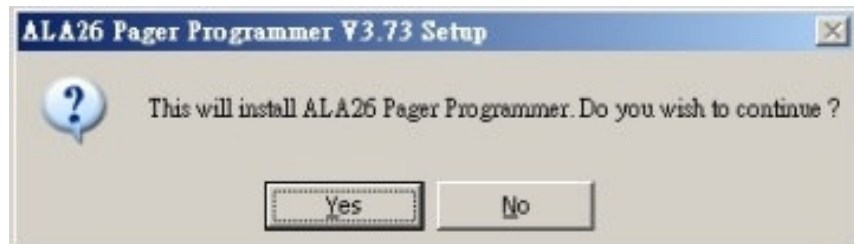


3. Click “Next” on the Welcome screen.




4. Enter your user information and click “Next”.  
(Note: you must enter at least a single character "into the company field)

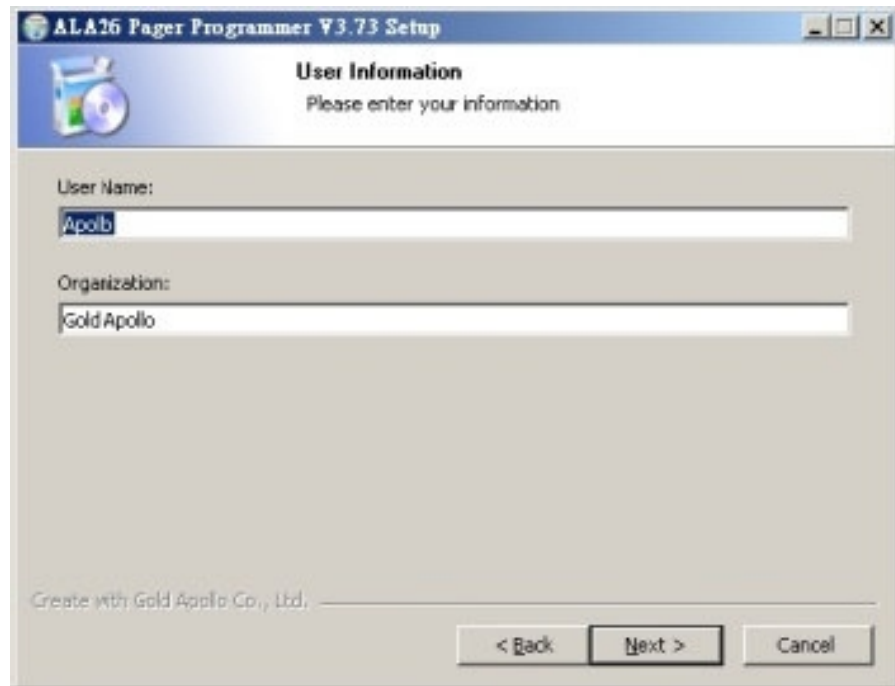


5. Choose where the program should be installed and click “Next”.

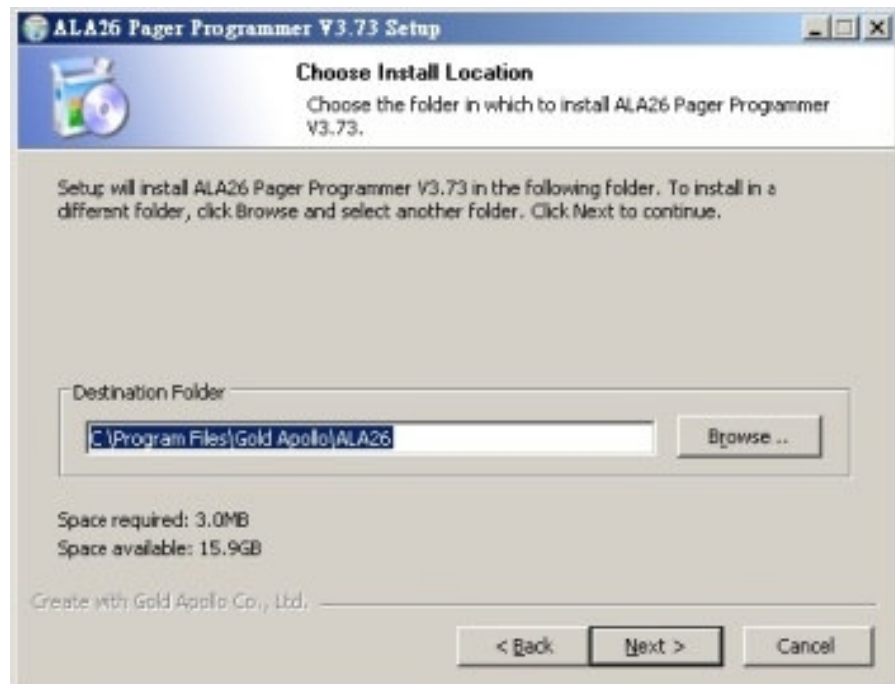


6. On the Select Program Folder screen choose where you would like the program to show up in your start menu and click “Install”.

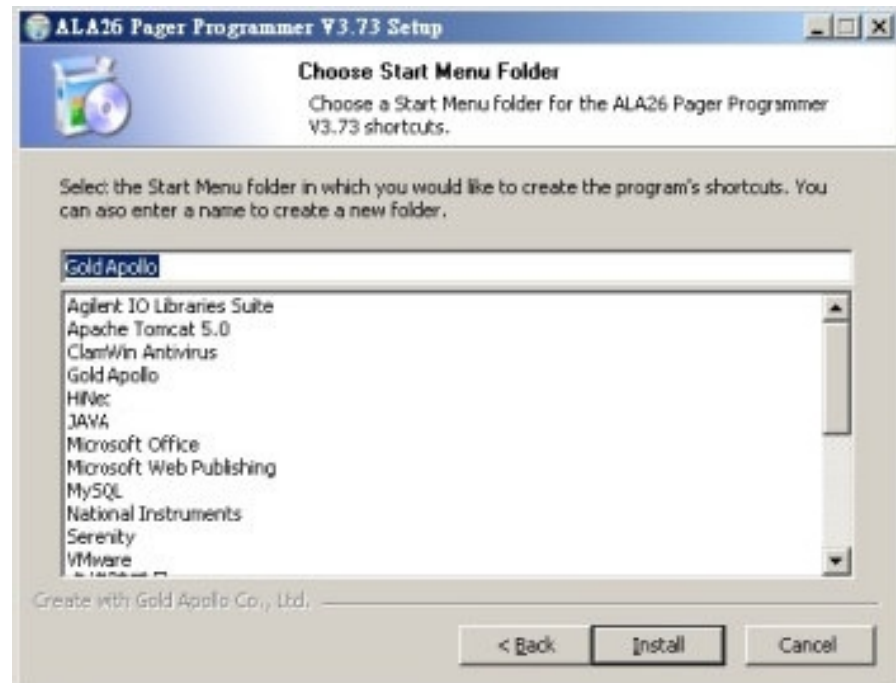

7. Click “Finish” on the Setup Complete screen.

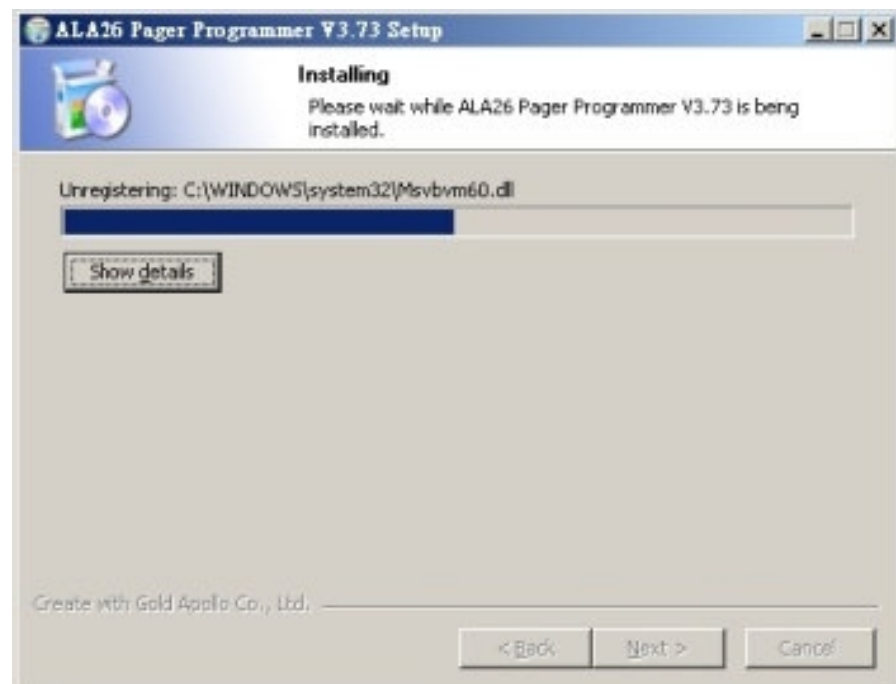

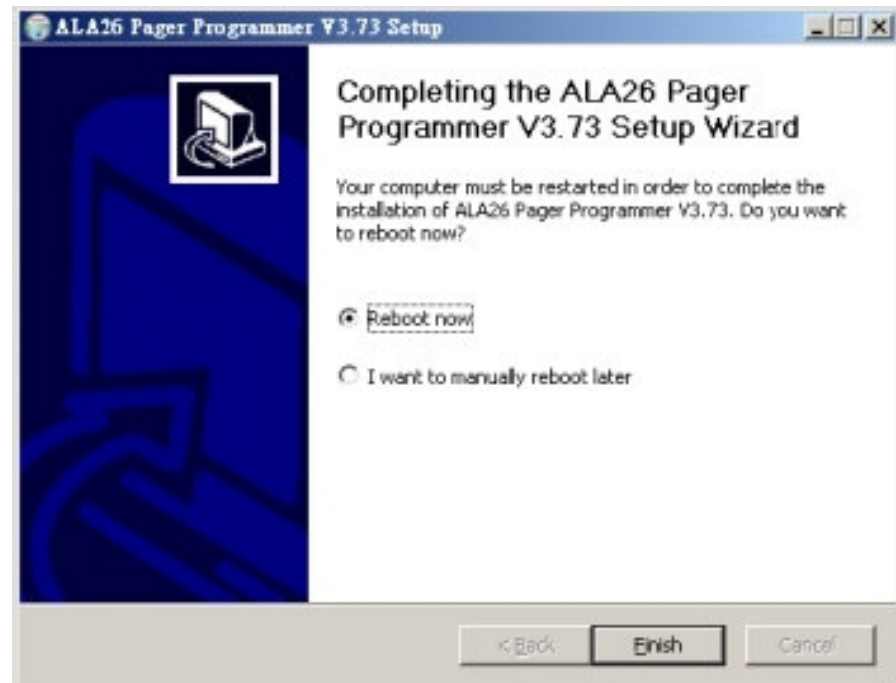

## Running

**You now have the program installed. To run it from the Start menu/Programs / Gold Apollo /ALA26 Pager Programmer**



# ALA26 Programming


## Introduction

### Preparing a Pager for Reading or Programming:


- Establish a computer hardware configuration.
- Run the programming software of ALA26.
- A Power LED illuminates on the Programming Interface to indicate proper contact. If the Power LED did not illuminate then you must check the configuration and restart the programming software of ALA26.
- Align the pager contact pin holes with the contact pins of the ALA26 Programmer.
- Press down on the pager until it is tight in the fixture.
- Turn the pager off or wait the pager until standby mode.  
The pager is now ready to read or program.

## Starting the Programmer


The application can be launched from Start → Programs → Gold Apollo → ALA26 Pager Programmer. The following window appears :

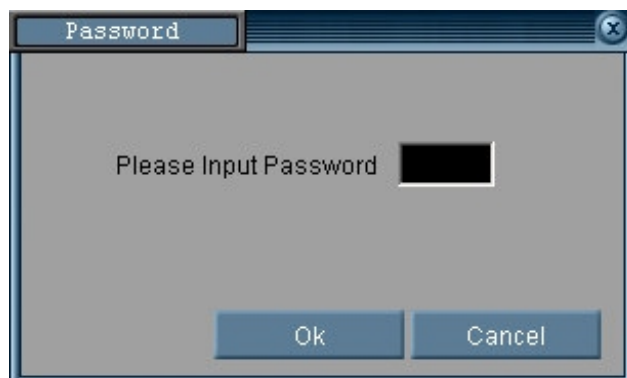

Input your password. If key in wrong password for 3 times, the system shuts off automatically. If the password is correct, the following window appears :

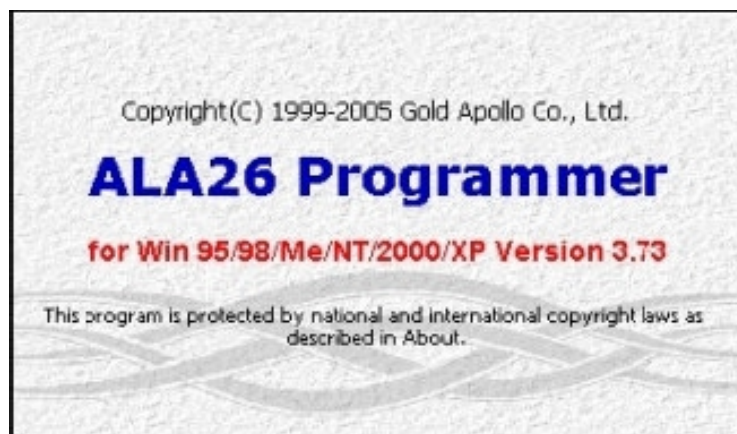

Now, the system examines that the ALA26 programmer is well installed. If any questions, the following window appears :

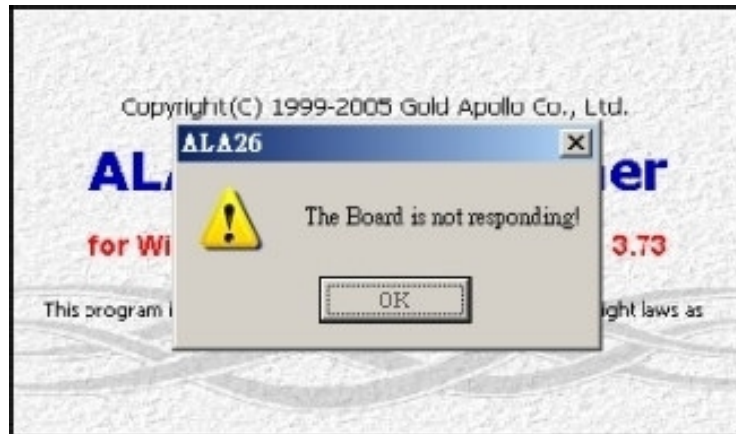

Please re-check the ALA26 programmer and printer port are well installed or not. If the connection with the ALA26 programmer are OK. The system enters the Code and Features Menu °

## Code and Features Menu

ALA26 Pager Programmer V3.73  
File Pager Help

**Freq. & Codes**   **Alert & Status**   **Prompts Edit**   **Source Prompts**

**Frequency**  
 Range Of Frequency: 130-180MHz   Frequency Of Pager: 1530000 00Hz  
 POCSAG Signal Baud Rate: 1200 bps   Channel: 5KHz

**Capcode( Decimal Address )**

Cap	Capcode	ON	Fun. Bit	Disable & Disp	Priority	Type
Cap #1	1234567	<input checked="" type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: PPPP
Cap #2	1234560	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: 1234
Cap #3	1234561	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: 5678
Cap #4	1234562	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: 9ABC
Cap #5	1234563	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: DDDD
Cap #6	1234564	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: EEEE
Cap #7	1234565	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: FFFF
Cap #8	1234566	<input type="checkbox"/>	ON	Fun. Bit	Disable & Disp: AAAA	Priority: ---- Type: FFFF

**Message Type Status ( PG:Personal & Group   M:Mail Drop )**

	PG	M1	M2	M3	M4	M5	M6	M7	M8	M9	MA	MB	MC	MD	ME	MF
Alert Length Select	08	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

**Auto Increase 1 After Write**  
☐ 1st Capcode Auto Increase   ☐ 2nd Capcode Auto Increase

## Frequency

Frequency			
Range Of Frequency	<input type="text" value="130-180MHz"/>	Frequency Of Pager	<input type="text" value="1530000"/> 00Hz
POCSAG Signal Baud Rate	<input type="text" value="1200 bps"/>	Channel	<input type="text" value="5KHz"/>

- 

You can select the range of frequency and all setting will load default value.

- 

The frequency is on which the pager operates.

- 

The baud rate is on which the pager operates.

- 

Channel Spacing for frequency.

## Capcode (Decimal Address)

Capcode ( Decimal Address )						
Cap #1	<input type="text" value="1234567"/>	<input checked="" type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="PPPP"/>
Cap #2	<input type="text" value="1234560"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="1234"/>
Cap #3	<input type="text" value="1234561"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="5678"/>
Cap #4	<input type="text" value="1234562"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="9ABC"/>
Cap #5	<input type="text" value="1234563"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="DDDD"/>
Cap #6	<input type="text" value="1234564"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="EEEE"/>
Cap #7	<input type="text" value="1234565"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="FFFF"/>
Cap #8	<input type="text" value="1234566"/>	<input type="checkbox"/> ON	<input type="button" value="Fun. Bit"/>	Disable & Disp: <input type="text" value="AAAA"/>	Priority: <input type="text" value="----"/>	Type: <input type="text" value="FFFF"/>

- Cap #1

Please input 1<sup>st</sup> Capcode (7 Dec digits between 8 and 2097151).

- ON

Enable or disable 2<sup>nd</sup> Capcode (address).

- 

Click to set function bit (A, B, C, D) message control.

ALA26 Pager Programming V3.75  
Page 343

**Freq & Codes** **Alert & Status** **Prompts Edit** **Source Prompts**

**Frequency**  
Range Of Frequency: 130-180MHz Frequency of Pager: 1530000 00Hz  
POCSAG Signal Baud Rate: 1200 bps Channel: 5KHz

**Capcode (Decimal Address)**

Cap #	Decimal Address	ON	Fun. Bit	Disable & Disp:	Priority	Type
Cap #1	1234567	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF
Cap #2	1234560	<input type="checkbox"/>	Fun. Bit	AAAA	----	1234
Cap #3	1234561	<input type="checkbox"/>	Fun. Bit	AAAA	----	5678
Cap #4	1234562	<input type="checkbox"/>	Fun. Bit	AAAA	----	9ABC
Cap #5	1234563	<input type="checkbox"/>	Fun. Bit	AAAA	----	CCDD
Cap #6	1234564	<input type="checkbox"/>	Fun. Bit	AAAA	----	EEEE
Cap #7	1234565	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF
Cap #8	1234566	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF

**Message Type Status (PG: Personal & Group M: Mail Drop)**

Alert Length Select Alert Length: 00

Auto Increase 1 After Write  
☐ 1st Capcode Auto Increase ☐ 2nd Capcode Auto Increase

ALA26 Pager Programming V3.75  
Page 343

**Freq & Codes** **Alert & Status** **Prompts Edit** **Source Prompts**

**Frequency**  
Range Of Frequency: 130-180MHz Frequency of Pager: 1530000 00Hz  
POCSAG Signal Baud Rate: 1200 bps Channel: 5KHz


**Capcode (Decimal Address)**

Cap #	Decimal Address	ON	Fun. Bit	Disable & Disp:	Priority	Type
Cap #1	1234567	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF
Cap #2	1234560	<input type="checkbox"/>	Fun. Bit	AAAA	----	1234
Cap #3	1234561	<input type="checkbox"/>	Fun. Bit	AAAA	----	5678
Cap #4	1234562	<input type="checkbox"/>	Fun. Bit	AAAA	----	9ABC
Cap #5	1234563	<input type="checkbox"/>	Fun. Bit	AAAA	----	CCDD
Cap #6	1234564	<input type="checkbox"/>	Fun. Bit	AAAA	----	EEEE
Cap #7	1234565	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF
Cap #8	1234566	<input type="checkbox"/>	Fun. Bit	AAAA	----	FFFF

**Message Type Status (PG: Personal & Group M: Mail Drop)**

Alert Length Select Alert Length: 00

Auto Increase 1 After Write  
☐ 1st Capcode Auto Increase ☐ 2nd Capcode Auto Increase

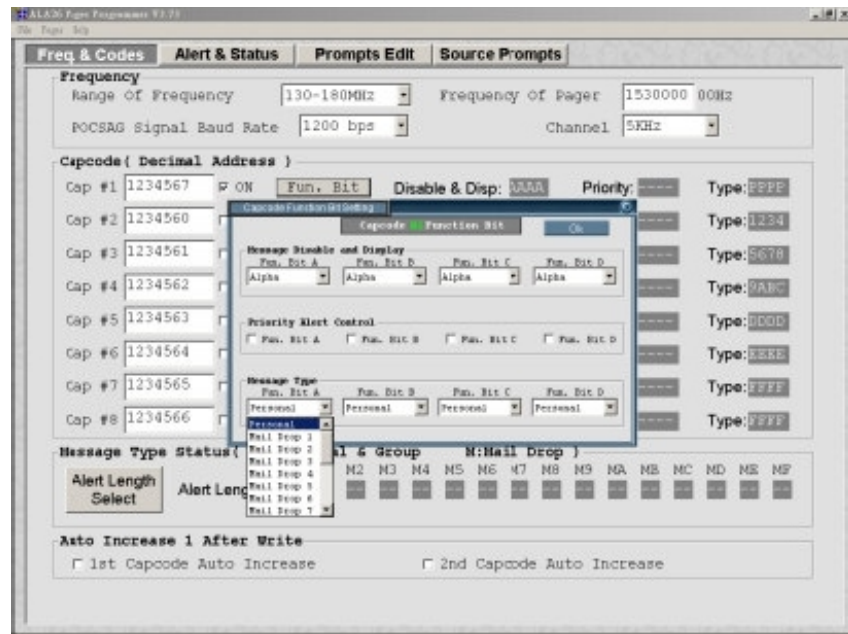

- **Disable & Disp:** AAAA

Function Bit (A, B, C, D) Message Display:

N: STD Number.

P: PRC Number.

A: Alpha number.

I: Ideographic.

T: Tone only

D: Disable

- **Priority:** ----

Function Bit (A, B, C, D) Priority Alert: V is Enable, - is disable.

- **Type:** PPPP

Function Bit (A, B, C, D) Message Type:

P: Personal.

1 to 9: Mail Drop 1 to Mail Drop 9.

A to E: Mail Drop A to Mail Drop E.

G: Group.



## Message Type Status

Message Type Status ( PG:Personal & Group		M:Mail Drop )															
Alert Length Select	Alert Length	PG	M1	M2	M3	M4	M5	M6	M7	M8	M9	MA	MB	MC	MD	ME	MF
		08	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

- **Alert Length Select**

Click to set personal and mail drop(1~9、A~E) alert length.



**Personal and Mail Drop Status Control**

**Personal and Group Alert Length**  
 Personal Alert Length: 8 sec

**Mail Drop Alert Length**

Mail Drop 1: Disable	Mail Drop 9: Disable
Mail Drop 2: Disable	Mail Drop A: Disable
Mail Drop 3: Disable	Mail Drop B: Disable
Mail Drop 4: Disable	Mail Drop C: Disable
Mail Drop 5: Disable	Mail Drop D: Disable
Mail Drop 6: Disable	Mail Drop E: Disable
Mail Drop 7: Disable	Mail Drop F: Disable
Mail Drop 8: Disable	

OK

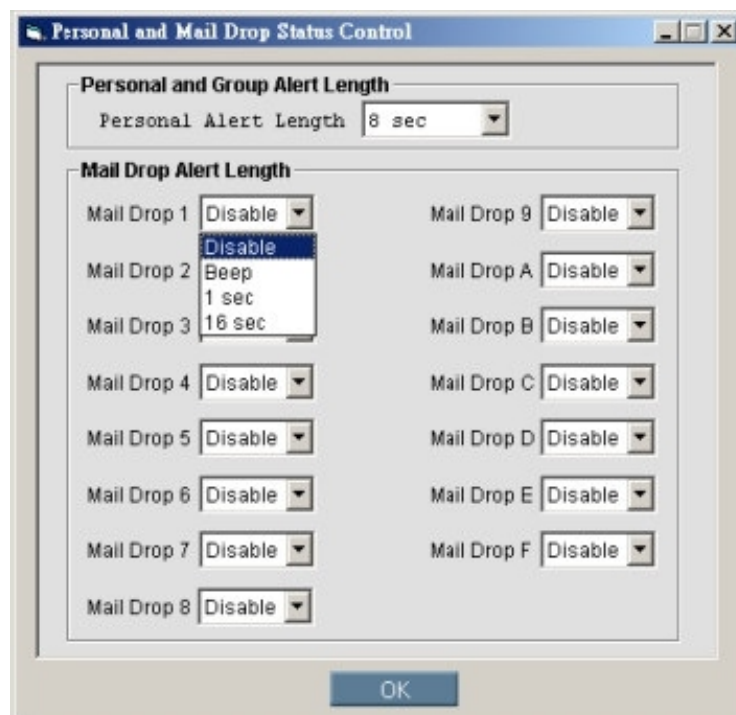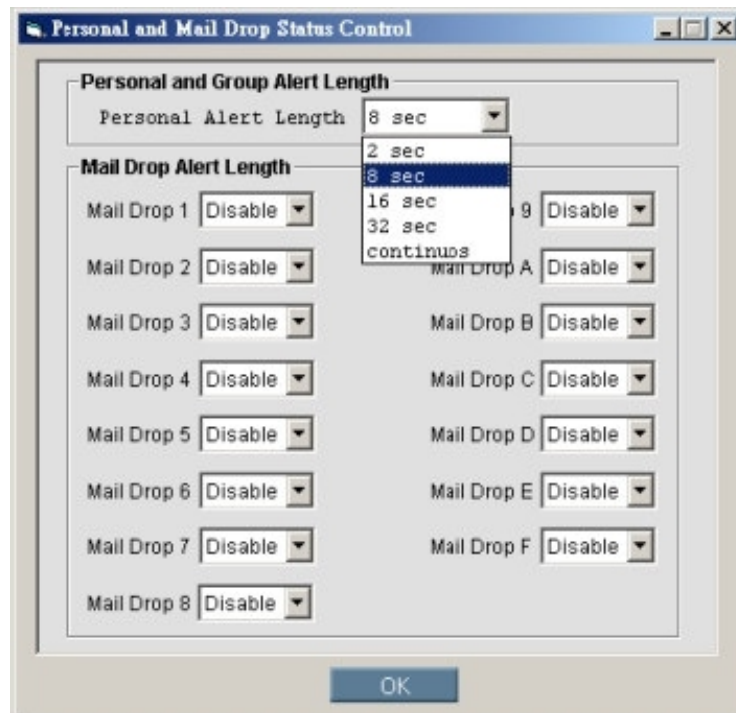

- **Alert Length** PG 08

The available selections for all personal and group call messages alerts are:

02: 2 sec.

08: 8 sec.

16: 16 sec.

32: 32 sec..

**CT:** continuous.

- **Alert Length** PG 08 MI

The available selections for mail drop messages alerts are:

--: Disable.

BP: Short Beep.

01: 1 sec.

16: 16 sec.

## Auto Increase 1 after write

Auto Increase 1 After Write	
<input type="checkbox"/> 1st Capcode Auto Increase	<input type="checkbox"/> 2nd Capcode Auto Increase

- ☐ 1st Capcode Auto Increase  
1<sup>st</sup> capcode always increment by one after write.
- ☐ 2nd Capcode Auto Increase  
2<sup>nd</sup> capcode always increment by one after write.

## Alert and Status

**ALA26 Pager Programmer V3.73**

File Pager Help

**Freq. & Codes** **Alerts & Status** **Prompts Edit** **Source Prompts**

**Alerts and Status**

☒ Duplicate Msg Detect    Paging Display **Page Count**

☐ Discard Error Msg    ☒ Lowcell Alert ON    Sequential Lockout **Disable**

☐ Disp Source Addr ON    Polarity **Normal**    Reminder Duration **2 minutes**

Battery Gauge Level-High **1.39V**    Out-of Service Control **5 min**

Battery Gauge Level-Med **1.29V**    Read Time Out **12 sec**    Password(4 Dec) **0000**

Battery Gauge Level-Low **1.19V**    Screen Contrast **4** **Screen**

☒ Push Key Lamp On Enable    ☐ RD Key Delete Enable    ☐ RD Key Pager Off

☒ Long Message Control Enable    ☒ Counter Out Enable

☐ Beep And Vibration

**Menu Of Pager**

☐ Zoom In/Out Disable    ☐ Set Alarm Disable    ☐ Auto Sleep Disable

☐ Set Scroll Disable    ☒ Set Alert Disable    **Tone 1**

☐ Set Time Disable    ☐ Power Off Disable

**Manual Write**

☒ Manual Write Enable    ☒ Password Required Enable

☒ Frequency Modification Enable    ☒ Password Modification Enable

**Prompts**

Power Up Logo **APOLLO**    **L C R**    Logo Font **English(Large)**

Prompt Language Type **English**    Date Display Method **mm-dd-yy**



## Alert and Status

- ☒ Duplicate Msg Detect

If it is selected, duplication detection is performed on all personal messages with the same message type as the new message, on a character by character basis. Error characters are ignored during the check. If all non-error characters in both messages match, the existing matching message is flagged as a duplicate. The message with the least number of errors is stored and the other messages are discarded. Duplication is not performed on mail-drop messages.

- ☐ Discard Error Msg

If it is selected, error message will be discarded.

- ☐ Disp Source Addr ON

If it is selected, the message will show the address source at last.

- Battery Gauge Level-High 1.39V ▾

This value represents the battery voltage level necessary for the battery gauge to display a full battery. If the battery voltage is higher or equal to this value, the full battery gauge icon is displayed. Valid selections are: 1.58V, 1.53V, 1.48V, 1.43V, 1.39V, 1.35V, 1.29V, 1.23V, 1.19V, 1.14V, 1.09V, 1.05V, and 1.00V. The High level must be greater than the Med level, and the Med level Must be greater than the Low level. None of the levels can be equal to each other.

- Battery Gauge Level-Med 1.29V ▾

This value represents the battery voltage level necessary for the battery gauge to display a full battery. If the battery voltage is higher or equal to this value, the full battery gauge icon is displayed. Valid selections are: 1.58V, 1.53V, 1.48V, 1.43V, 1.39V, 1.35V, 1.29V, 1.23V, 1.19V, 1.14V, 1.09V, 1.05V, and 1.00V. The High level must be greater than the Med level, and the Med level Must be greater than the Low level. None of the levels can be equal to each other.

- Battery Gauge Level-Low

This value represents the battery voltage level necessary for the battery gauge to display a full battery. If the battery voltage is higher or equal to this value, the full battery gauge icon is displayed. Valid selections are: 1.58V, 1.53V, 1.48V, 1.43V, 1.39V, 1.35V, 1.29V, 1.23V, 1.19V, 1.14V, 1.09V, 1.05V, and 1.00V. The High level must be greater than the Med level, and the Med level Must be greater than the Low level. None of the levels can be equal to each other.

- ☒ Push Key Lamp On Enable

If it is selected, the back-light will turn on after any key be pressed.

- ☐ RD Key Delete Enable

If it is selected, the RD key can use as delete feature at read message moment.

- ☐ RD Key Pager Off

If it is selected, the RD key can use as Pager off feature at time display moment.

- ☒ Long Message Control Enable

If it is selected, then the message most length is 2,000 characters, otherwise the length only can be 300 characters.

- ☐ Beep And Vibration

If it is selected, beep and vibration will active together.

- ☒ Counter Out Enable

If it is selected, the message will indicate the counter number at first.

- Paging Display

If “Direct” is selected then the message will show on the display at a message received. Otherwise it only shows a message location icon on the display.

- ☒ Lowcell Alert ON

If it is selected, the pager emits a, low battery cell alert when the battery reaches a low cell state.

- **Polarity**

It select the RF signal polarity is normal or invert.

- **Sequential Lockout**

The value is a sequential lockout timer begins when a message arrives and is flagged as being sequentially locked out. If duplicate messages arrive, one of the messages is disregarded and not flagged as a duplicate. Valid selections are disabled, 30 seconds, 60 seconds, 120 seconds, 175 seconds and 240 seconds.

- **Reminder Duration**

With this option selected, the time period begins with a newly arrived message and is reset every time a new message is received. Once the time period expires, the pager does not emit any more reminder alerts until a new message arrives. Valid time period selections are: Disable, 2 minutes, 10 minutes and 60 minutes.

- **Out-of Service Control**

With an out-of-service time specified by the code plug, the pager is considered “out of service” when it does not detect a POCSAG synchronization word for that time period. The out-of-service icon displays at this time. Valid selections are: disabled, 1 min, 2 min, 5 min and 10 min.

- **Read Time Out**

The current pager display changes after the selected time frame has expired. Valid selections are: 8 sec, 12 sec, 20 sec and 30 sec.

- **Password(4 Dec)**

It is used for the user’s manual programming.

- **Screen Contrast**  **Screen**

It selects the LCD display contract level.

- ☒ **Counter Out Enable**

If it is selected, the message will indicate the counter number at first.

## Manu Of Pager

Menu Of Pager		
<input type="checkbox"/> Zoom In/Out Disable	<input type="checkbox"/> Set Alarm Disable	<input type="checkbox"/> Auto Sleep Disable
<input type="checkbox"/> Set Scroll Disable	<input type="checkbox"/> Set Alert Disable	
<input type="checkbox"/> Set Time Disable	<input type="checkbox"/> Power Off Disable	

- ☐ Zoom In/Out Disable

If it is selected, menu of zoom function will be disabled.

- ☐ Set Scroll Disable


If it is selected, menu of scroll is disabled.

- ☐ Set Time Disable

If it is selected, menu of set time is disabled.

- ☐ Set Alarm Disable

If it is selected, menu of set alarm is disabled.

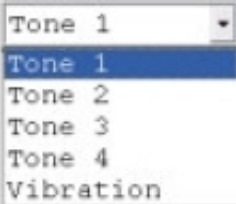- ☒ Set Alert Disable
- 

If it is selected, menu of set alert is disabled then you must select one of 5 type alerts as your default.

- ☐ Power Off Disable

If it is selected, menu of pager off is disabled.

- ☐ Auto Sleep Disable

If it is selected, menu of auto sleep is disabled.

## Manual Write

Manual Write	
<input checked="" type="checkbox"/> Manual Write Enable	<input checked="" type="checkbox"/> Password Required Enable
<input checked="" type="checkbox"/> Frequency Modification Enable	<input checked="" type="checkbox"/> Password Modification Enable

- ☒ Manual Write Enable

If it is selected, manual write enable.

- ☒ Frequency Modification Enable

If it is selected, frequency modification is enabled at manual programming.

- ☒ Password Required Enable

If it is selected, enters manual programming password is required.

- ☒ Password Modification Enable

If it is selected, enters manual programming password can be modification.

## Prompts

Prompts			
Power Up Logo	<input type="text" value="APOLLO"/>	<input type="button" value="L"/> <input type="button" value="C"/> <input type="button" value="R"/>	Logo Font <input type="text" value="English(Large)"/>
Prompt Language Type	<input type="text" value="English"/>	Date Display Method	<input type="text" value="mm-dd-yy"/>

## Prompts Edit

Each prompt can be customized in the code-plug, if desired, or the defaults can be used.

ALA26 Pager Programmer V3.73			
Freq. & Codes		Alert & Status	Prompts Edit
NO PAGES ----->	<input type="text" value="NO PAGES"/>	<input type="button" value="R"/>	TIME SET -----> <input type="text" value="TIME SET"/>
TONE ONLY ----->	<input type="text" value="TONE ONLY"/>	<input type="button" value="C"/>	ALARM SET -----> <input type="text" value="ALARM SET"/>
SLEEP ----->	<input type="text" value="SLEEP"/>	<input type="button" value="L"/>	SCROLL SET -----> <input type="text" value="SCROLL SET"/>
SILENT ----->	<input type="text" value="SILENT"/>	<input type="button" value="D"/>	START END -----> <input type="text" value="START"/> <input type="text" value="END"/>
PAGER OFF ? ---->	<input type="text" value="PAGER OFF ?"/>		SILENT THEN BEEP> <input type="text" value="SILENT THEN BEEP"/>
DELETE? ----->	<input type="text" value="MESSAGE DELETE ?"/>		PAGER OFF -----> <input type="text" value="PAGER OFF"/>
ESCAPE ----->	<input type="text" value="ESCAPE"/>		SET ALERT -----> <input type="text" value="SET ALERT"/>
MESSAGE LOCK --->	<input type="text" value="MESSAGE LOCK"/>		AUTO SLEEP SET -> <input type="text" value="AUTO SLEEP SET"/>
MESSAGE UNLOCK ->	<input type="text" value="MESSAGE UNLOCK"/>		ZOOM IN -----> <input type="text" value="ZOOM IN"/>
DELETE ----->	<input type="text" value="MESSAGE DELETE"/>		ZOOM OUT -----> <input type="text" value="ZOOM OUT"/>
DELETE ALL ----->	<input type="text" value="DELETE ALL"/>		FLASH ONLY-----> <input type="text" value="FLASH ONLY"/>
MOVE TO MEMO --->	<input type="text" value="MOVE TO MEMO"/>		
SET SCROLL ----->	<input type="text" value="SET SCROLL"/>		
SET TIME ----->	<input type="text" value="SET TIME"/>		
SET ALARM ----->	<input type="text" value="SET ALARM"/>		
DELETE ALL ? --->	<input type="text" value="DELETE ALL ?"/>		

## Source Prompts

ALA26 Pager Programmer V3.73

File Pager Help

**Freq. & Codes** **Alert & Status** **Prompts Edit** **Source Prompts**

Prompt Control: **Disable**

<input type="checkbox"/> Cap#1 Fun.Bit A	NEWS 1	<input type="checkbox"/> Cap#5 Fun.Bit A	NEWS 17
<input type="checkbox"/> Cap#1 Fun.Bit B	NEWS 2	<input type="checkbox"/> Cap#5 Fun.Bit B	NEWS 18
<input type="checkbox"/> Cap#1 Fun.Bit C	NEWS 3	<input type="checkbox"/> Cap#5 Fun.Bit C	NEWS 19
<input type="checkbox"/> Cap#1 Fun.Bit D	NEWS 4	<input type="checkbox"/> Cap#5 Fun.Bit D	NEWS 20
<input type="checkbox"/> Cap#2 Fun.Bit A	NEWS 5	<input type="checkbox"/> Cap#6 Fun.Bit A	NEWS 21
<input type="checkbox"/> Cap#2 Fun.Bit B	NEWS 6	<input type="checkbox"/> Cap#6 Fun.Bit B	NEWS 22
<input type="checkbox"/> Cap#2 Fun.Bit C	NEWS 7	<input type="checkbox"/> Cap#6 Fun.Bit C	NEWS 23
<input type="checkbox"/> Cap#2 Fun.Bit D	NEWS 8	<input type="checkbox"/> Cap#6 Fun.Bit D	NEWS 24
<input type="checkbox"/> Cap#3 Fun.Bit A	NEWS 9	<input type="checkbox"/> Cap#7 Fun.Bit A	NEWS 25
<input type="checkbox"/> Cap#3 Fun.Bit B	NEWS 10	<input type="checkbox"/> Cap#7 Fun.Bit B	NEWS 26
<input type="checkbox"/> Cap#3 Fun.Bit C	NEWS 11	<input type="checkbox"/> Cap#7 Fun.Bit C	NEWS 27
<input type="checkbox"/> Cap#3 Fun.Bit D	NEWS 12	<input type="checkbox"/> Cap#7 Fun.Bit D	NEWS 28
<input type="checkbox"/> Cap#4 Fun.Bit A	NEWS 13	<input type="checkbox"/> Cap#8 Fun.Bit A	NEWS 29
<input type="checkbox"/> Cap#4 Fun.Bit B	NEWS 14	<input type="checkbox"/> Cap#8 Fun.Bit B	NEWS 30
<input type="checkbox"/> Cap#4 Fun.Bit C	NEWS 15	<input type="checkbox"/> Cap#8 Fun.Bit C	NEWS 31
<input type="checkbox"/> Cap#4 Fun.Bit D	NEWS 16	<input type="checkbox"/> Cap#8 Fun.Bit D	NEWS 32

ALA26 Pager Programmer V3.73


File Pager Help

**Freq. & Codes** **Alert & Status** **Prompts Edit** **Source Prompts**

Prompt Control: **Forward**

<input type="checkbox"/> Cap#1 Fun.Bit A	NEWS 1	<input type="checkbox"/> Cap#5 Fun.Bit A	NEWS 17
<input type="checkbox"/> Cap#1 Fun.Bit B	NEWS 2	<input type="checkbox"/> Cap#5 Fun.Bit B	NEWS 18
<input checked="" type="checkbox"/> Cap#1 Fun.Bit C	NEWS 3	<input type="checkbox"/> Cap#5 Fun.Bit C	NEWS 19
<input type="checkbox"/> Cap#1 Fun.Bit D	NEWS 4	<input type="checkbox"/> Cap#5 Fun.Bit D	NEWS 20
<input type="checkbox"/> Cap#2 Fun.Bit A	NEWS 5	<input type="checkbox"/> Cap#6 Fun.Bit A	NEWS 21
<input type="checkbox"/> Cap#2 Fun.Bit B	NEWS 6	<input type="checkbox"/> Cap#6 Fun.Bit B	NEWS 22
<input type="checkbox"/> Cap#2 Fun.Bit C	NEWS 7	<input type="checkbox"/> Cap#6 Fun.Bit C	NEWS 23
<input type="checkbox"/> Cap#2 Fun.Bit D	NEWS 8	<input type="checkbox"/> Cap#6 Fun.Bit D	NEWS 24
<input type="checkbox"/> Cap#3 Fun.Bit A	NEWS 9	<input type="checkbox"/> Cap#7 Fun.Bit A	NEWS 25
<input type="checkbox"/> Cap#3 Fun.Bit B	NEWS 10	<input type="checkbox"/> Cap#7 Fun.Bit B	NEWS 26
<input type="checkbox"/> Cap#3 Fun.Bit C	NEWS 11	<input type="checkbox"/> Cap#7 Fun.Bit C	NEWS 27
<input type="checkbox"/> Cap#3 Fun.Bit D	NEWS 12	<input type="checkbox"/> Cap#7 Fun.Bit D	NEWS 28
<input type="checkbox"/> Cap#4 Fun.Bit A	NEWS 13	<input type="checkbox"/> Cap#8 Fun.Bit A	NEWS 29
<input type="checkbox"/> Cap#4 Fun.Bit B	NEWS 14	<input type="checkbox"/> Cap#8 Fun.Bit B	NEWS 30
<input type="checkbox"/> Cap#4 Fun.Bit C	NEWS 15	<input type="checkbox"/> Cap#8 Fun.Bit C	NEWS 31
<input type="checkbox"/> Cap#4 Fun.Bit D	NEWS 16	<input type="checkbox"/> Cap#8 Fun.Bit D	NEWS 32




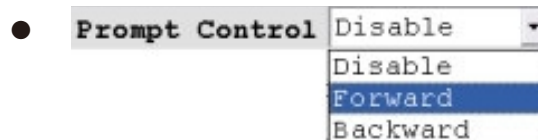

Each prompt can be customized in the code-plugin, if desired, or the defaults can be used. If selected, the text programmed is displayed at the first of the message or end of message.


## File | Open (Ctrl + O)

Click “Open” or “Ctrl + O” to open the ALA26 code-plugin file. The file has the extension “.tbl”.

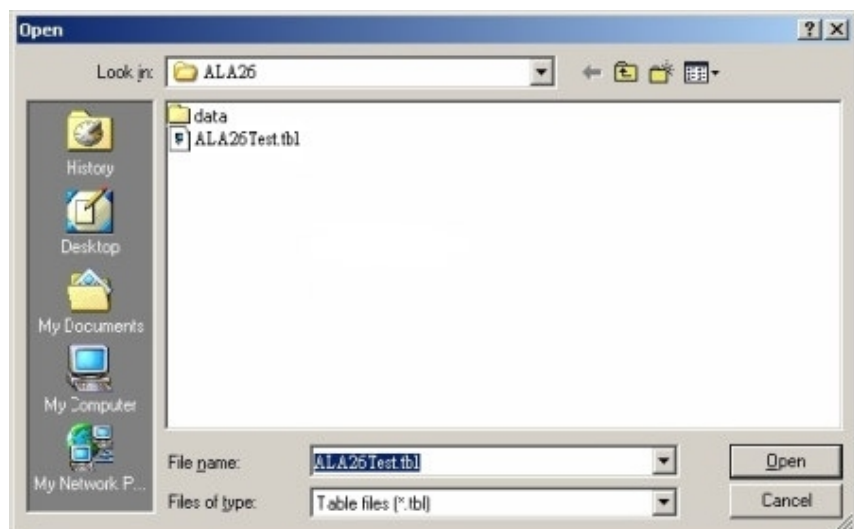

## File | Save (Ctrl + S)

Click “Save” or “Ctrl + S”, save the current code-plugin data to a file.


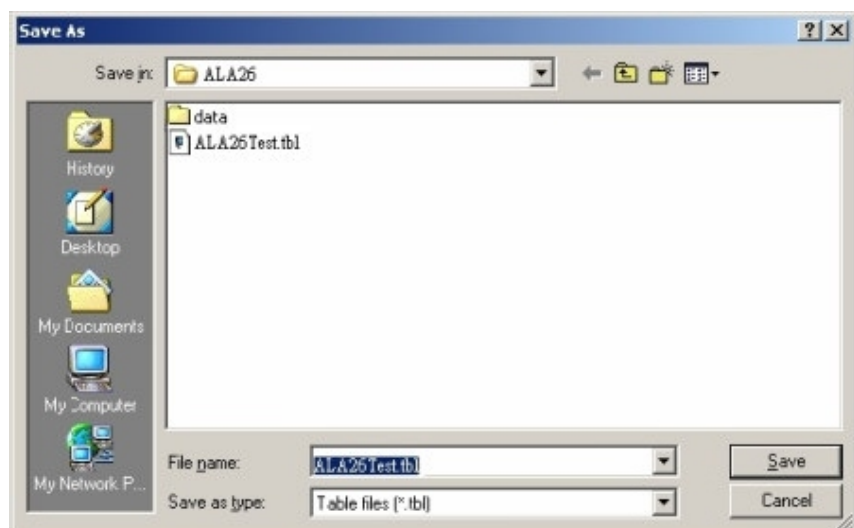


**File | Exit (Ctrl + E)**

Exit the programmer software.

**Pager | Read (F3)**



Click “Read” or press “F3” to read code-plug data from a ALA26. The status window shows reading process, when it's done, you will see a message window of 『Read success』 on the screen.

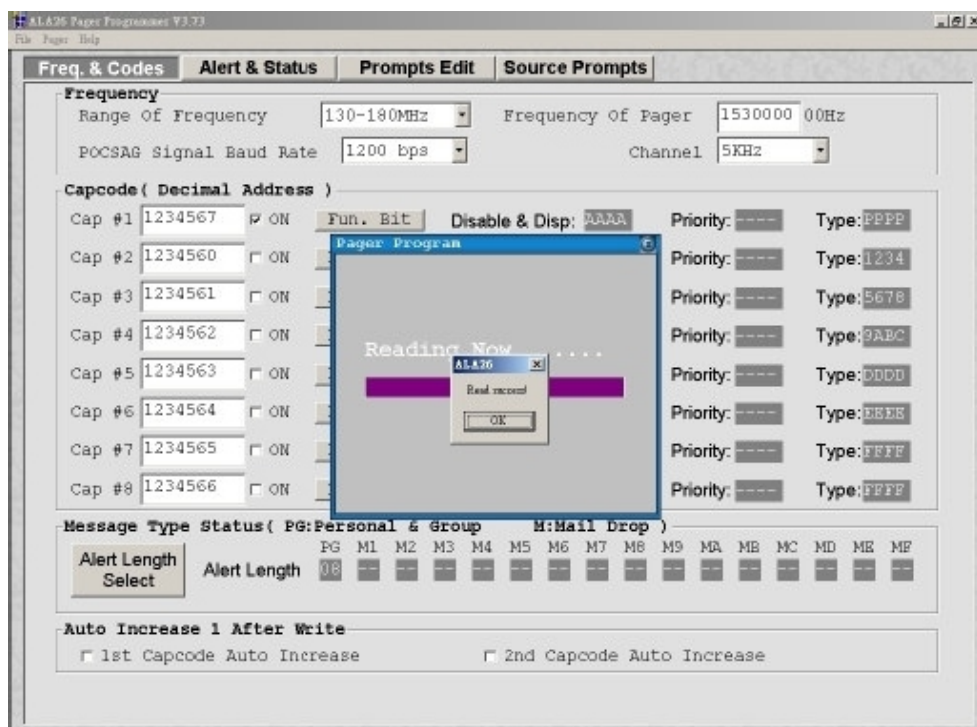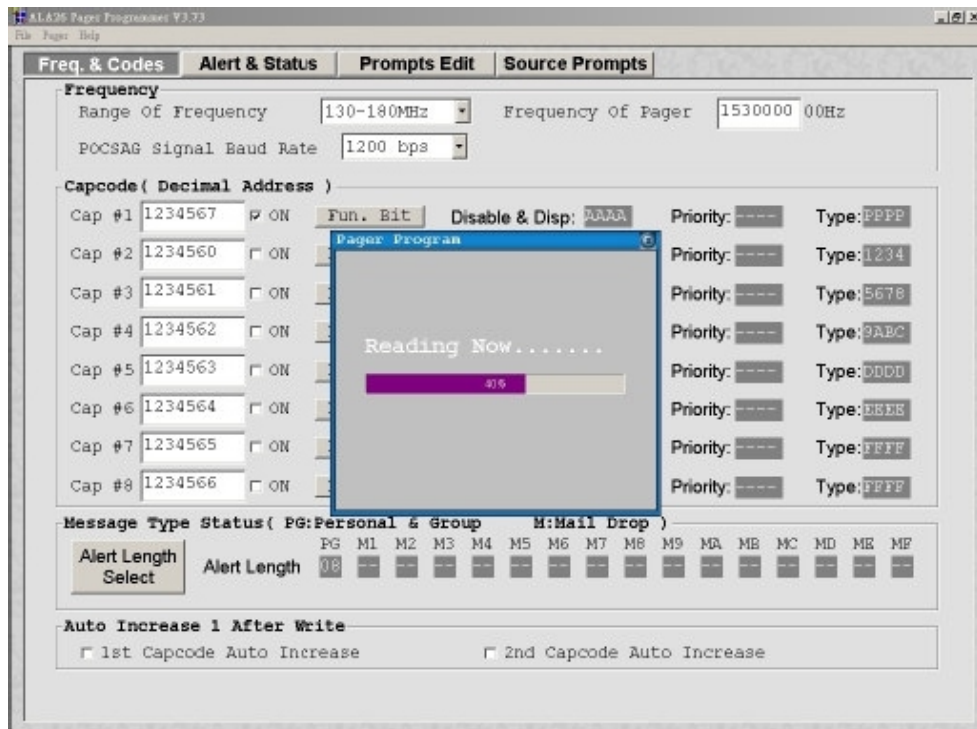




## Pager | Write (F4)

Click “Write” or press “F4” to program the ALA26. The status window shows the writing process. When writing process finished, will starting verify process, when it is done, you will see a window of 『Verify success』 on the screen.

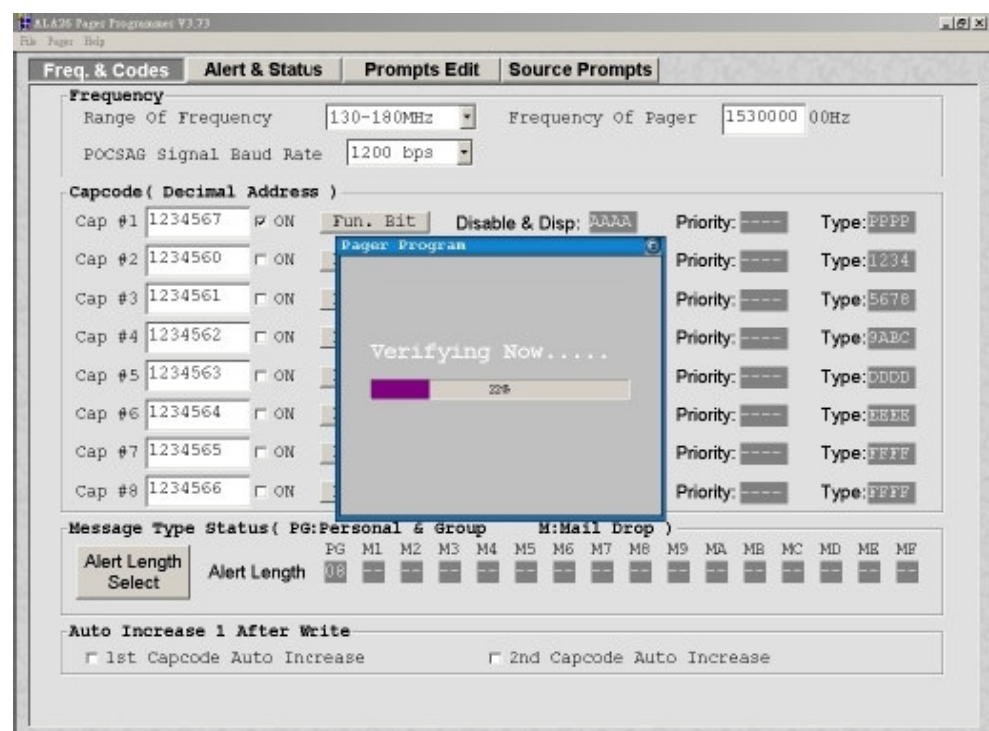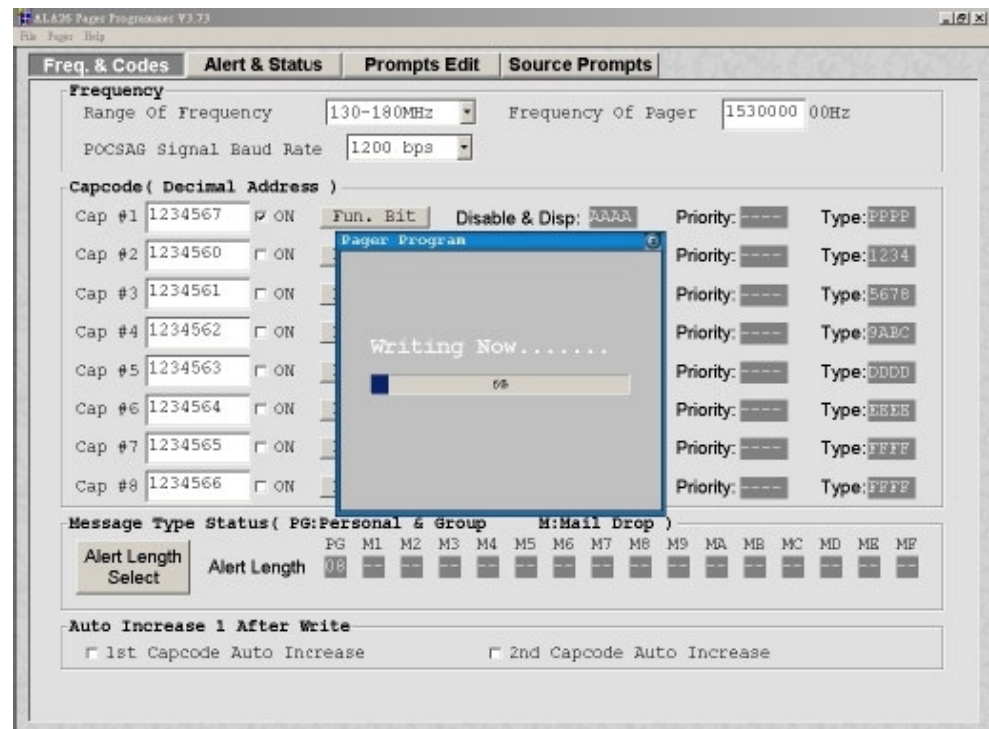

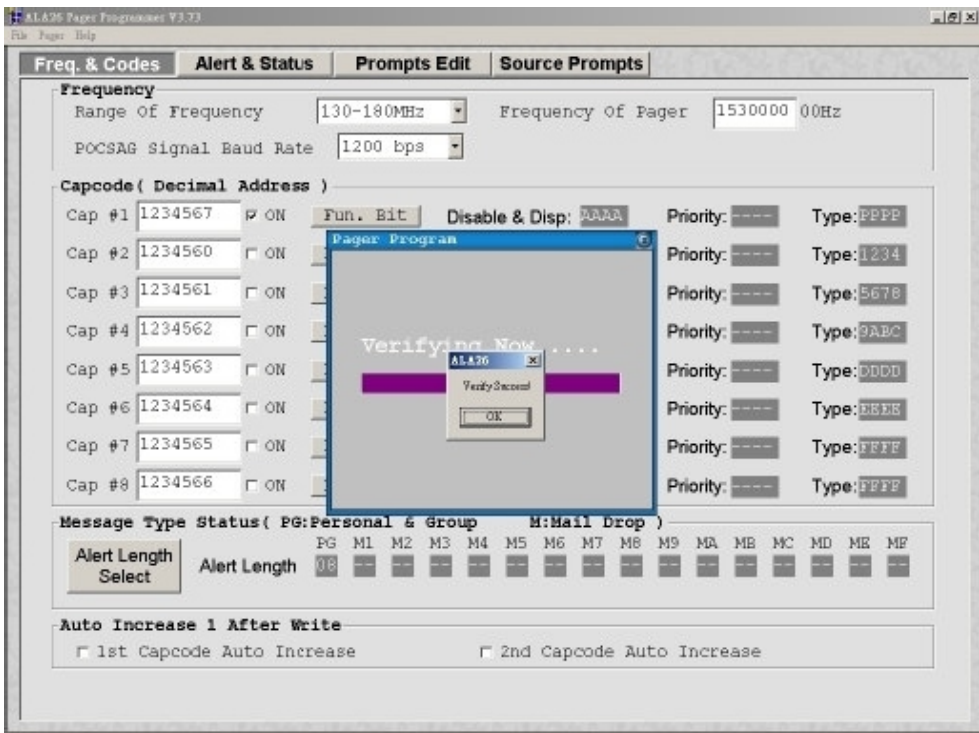

About

About the ALA26 Pager Programmer software information.

